






## www.orbitalock.com

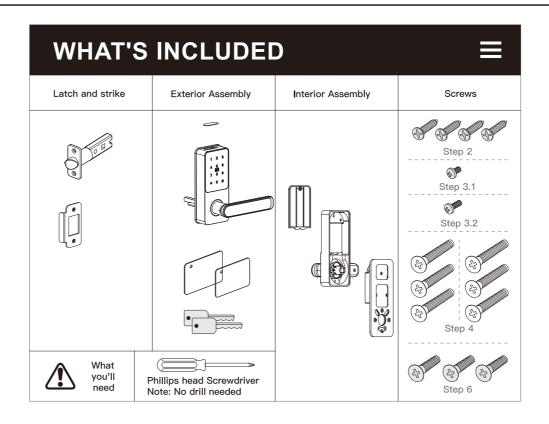


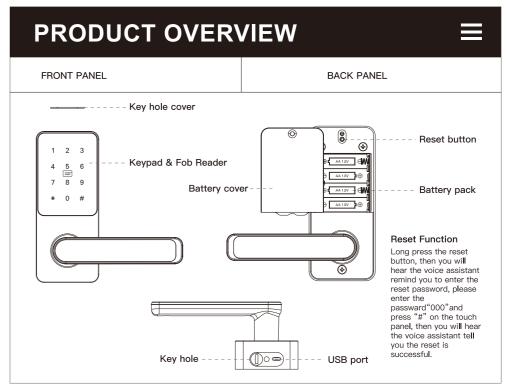


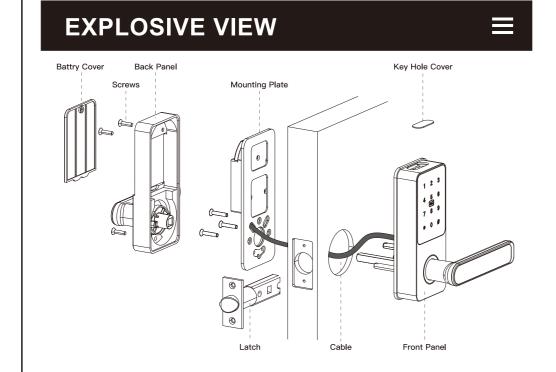


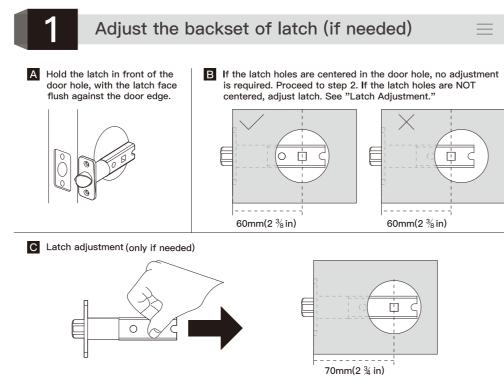


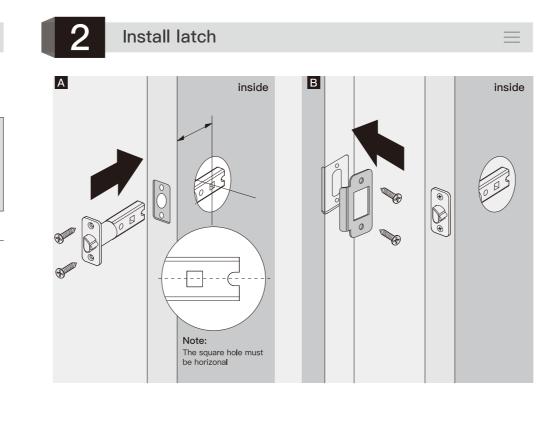

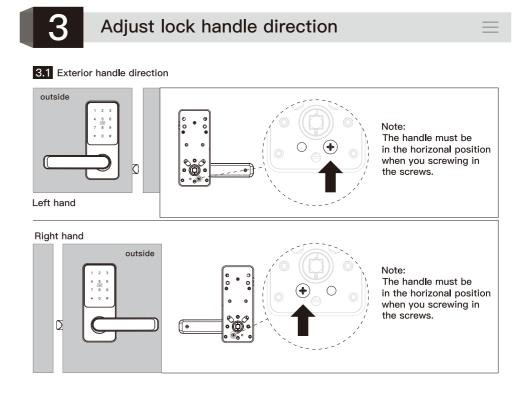

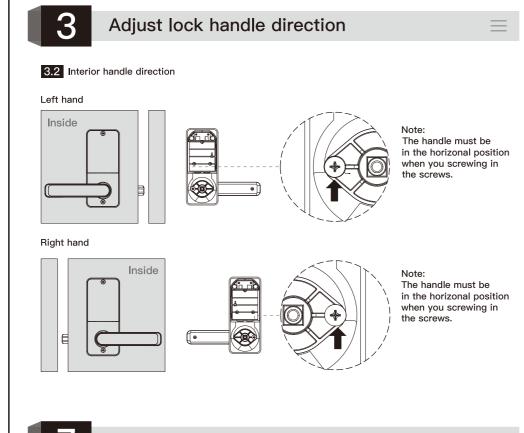

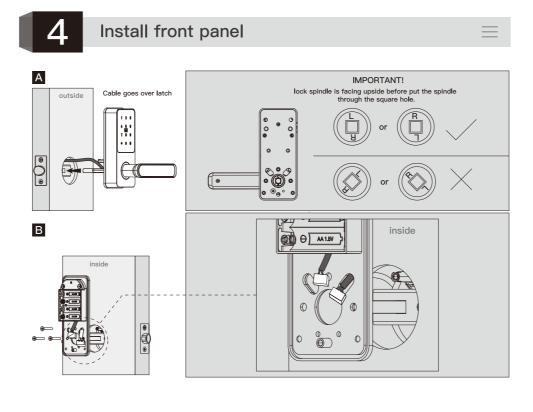

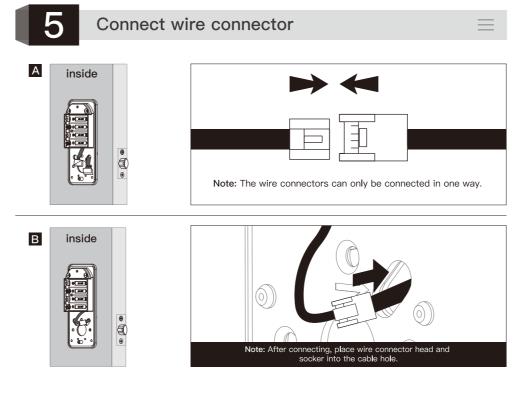


Install our lock on top


If you have a deadbolt lock on top,


avoid installation issues.


please move the deadbolt lock to the


bottom and install our lock on top to

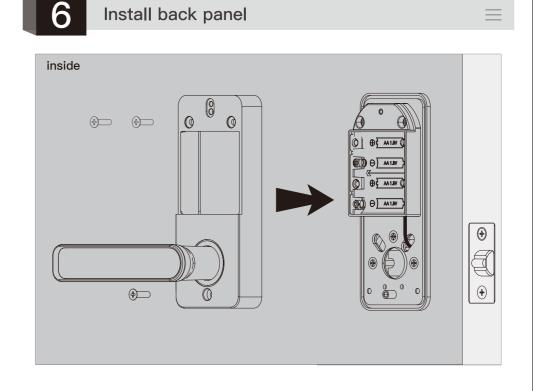

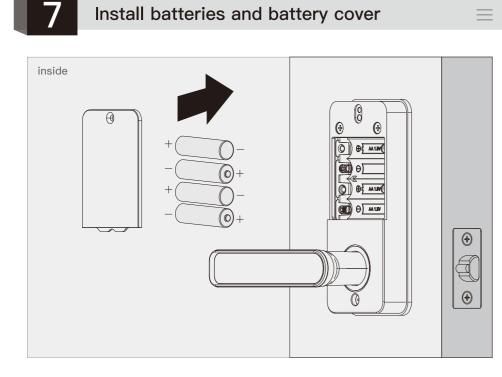

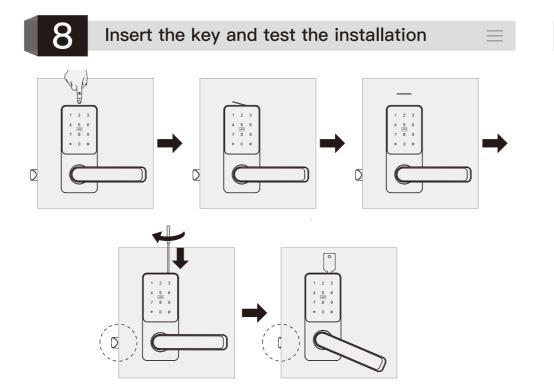

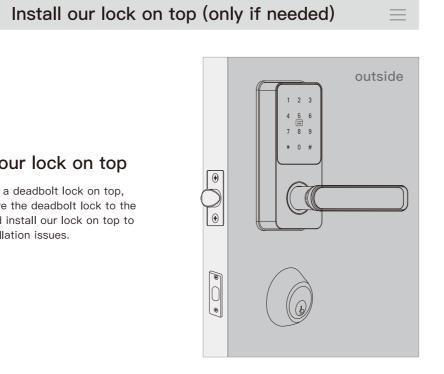

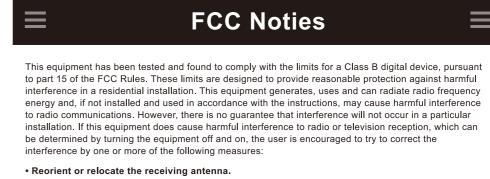

• Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/ TV technician for help.